


AgLeader InCommand 1200


- 1) Before loading your VR prescription onto the flash drive, you must first unzip the files DBF, SHP, and SHX.
- 2) To unzip the files, right click on the zipped (compressed) folder. Select "Extract All".

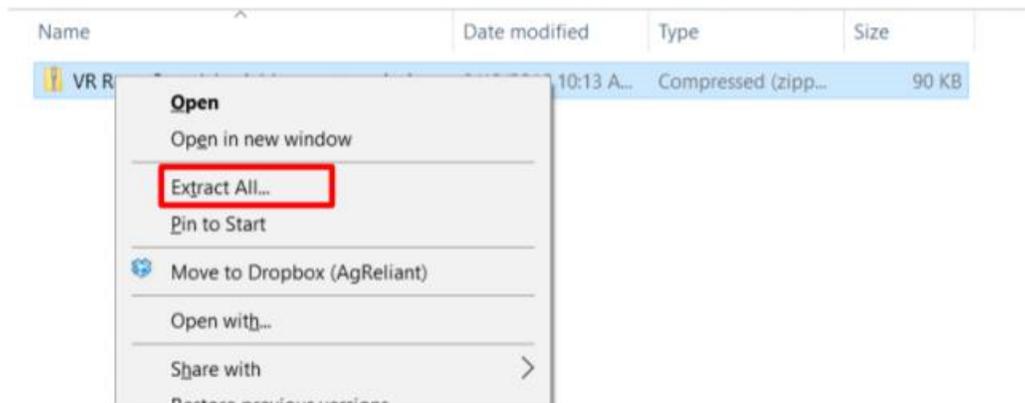

- 3) Move the **unzipped folder** onto the main menu of your flash drive.


See Next Page for Step-by-Step Directions on How to Load VR Prescriptions to Monitor

1. Homescreen: Select the Planting App icon

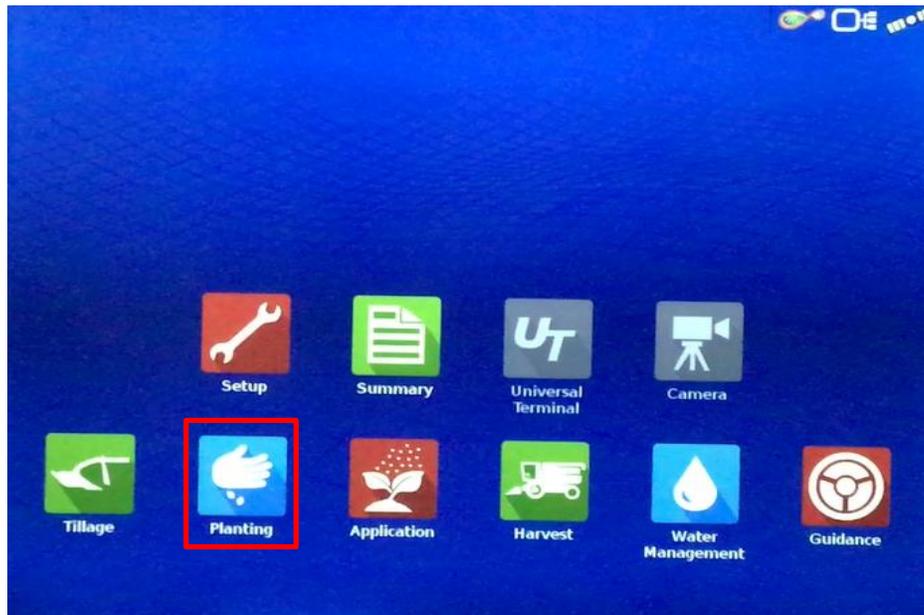


2. Operating Configuration: Select the correct Tractor and Planter, Select Next

Note: To add a new equipment use the + button

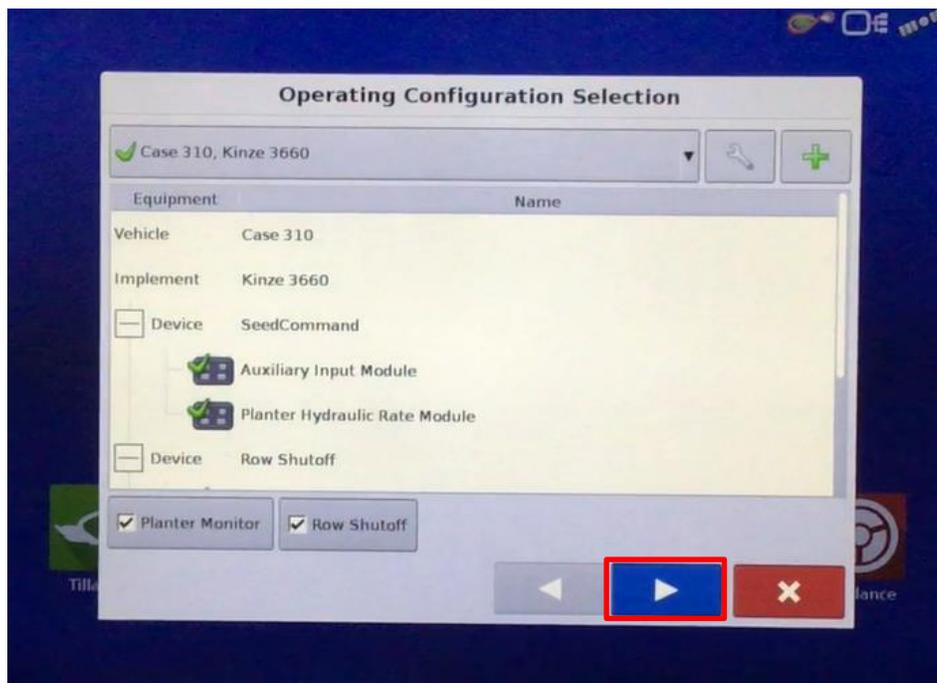


3. Management Selection: Select Year, Grower, Farm, and Field, Select Next

Note: To add a new management selection use the + button

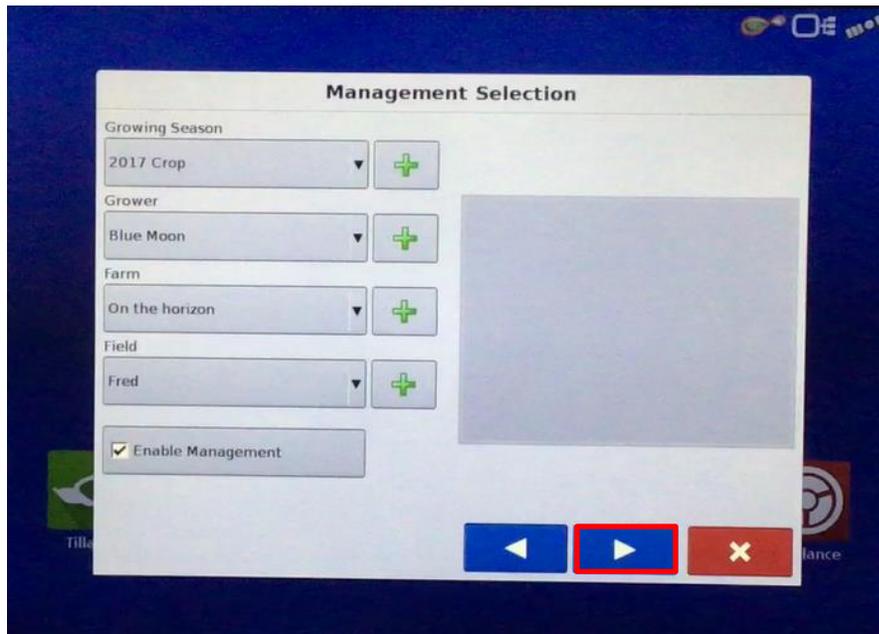


4. Product Selection Screen: Use the dropdown to select the correct product, then click Next


Note: To add a new product use the + button

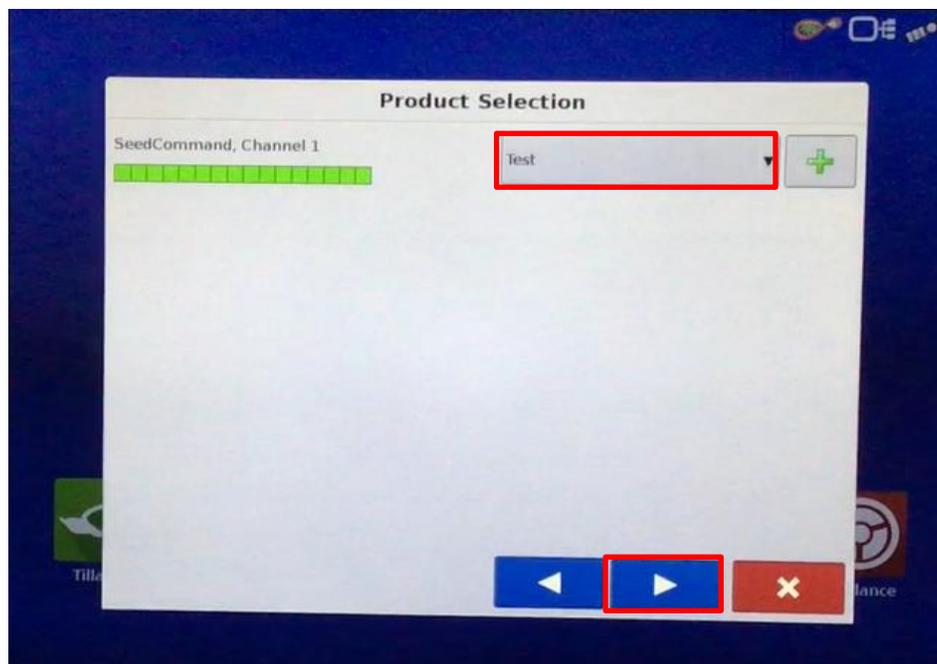


5. Event Selection Screen: Select “Start New Event”

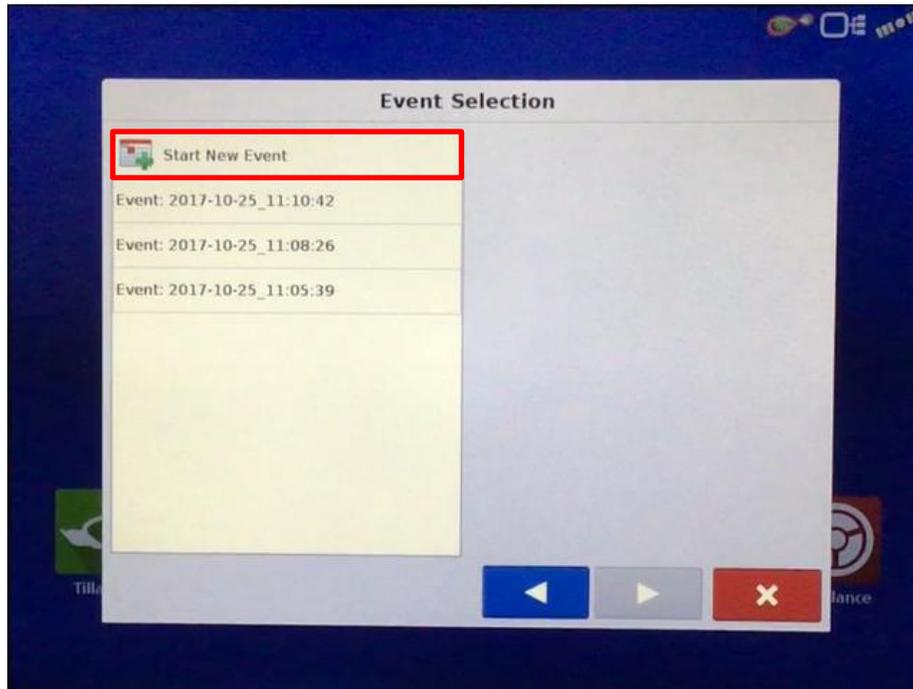

6. Options Screen: Select Controlling Product, select Next

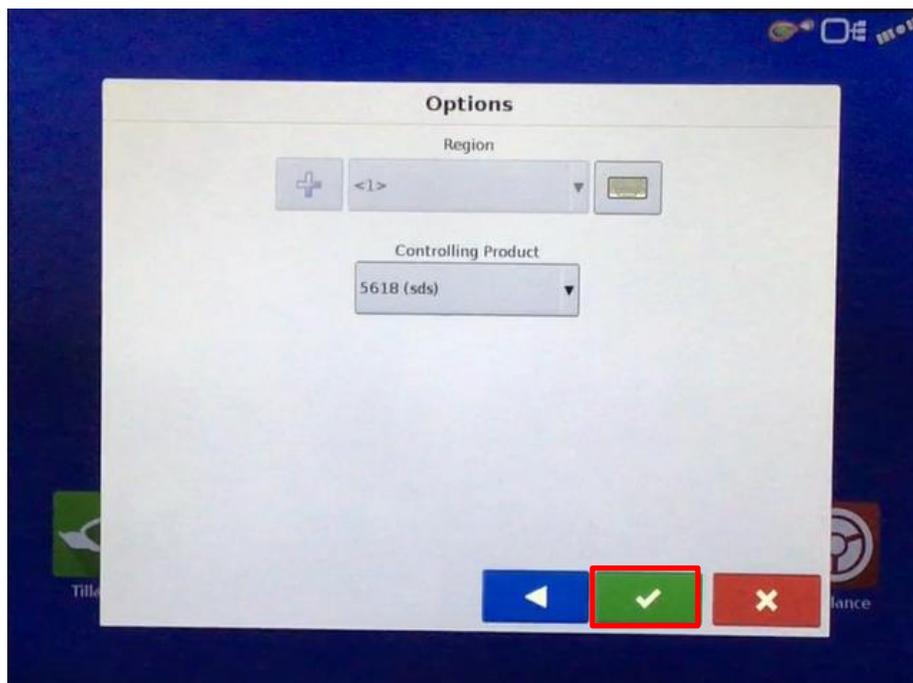


7. Map View Screen: Select “Rate Control Settings”

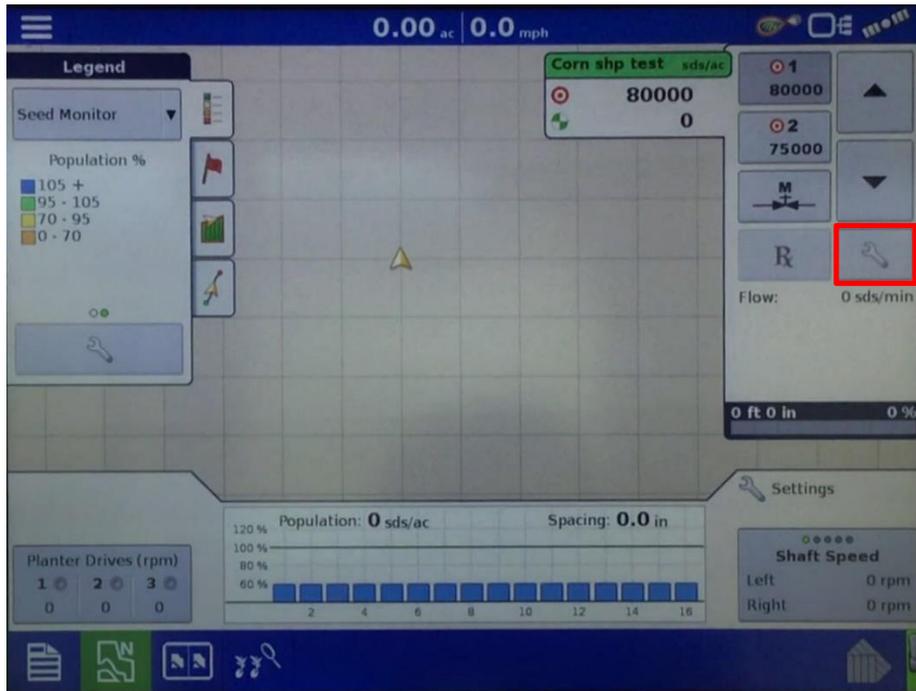


8. **INSERT USB Containing Needed Shape Files into the Agleader Monitor AT THIS TIME**


9. Rate Control Settings Screen: Select the Load Prescription button

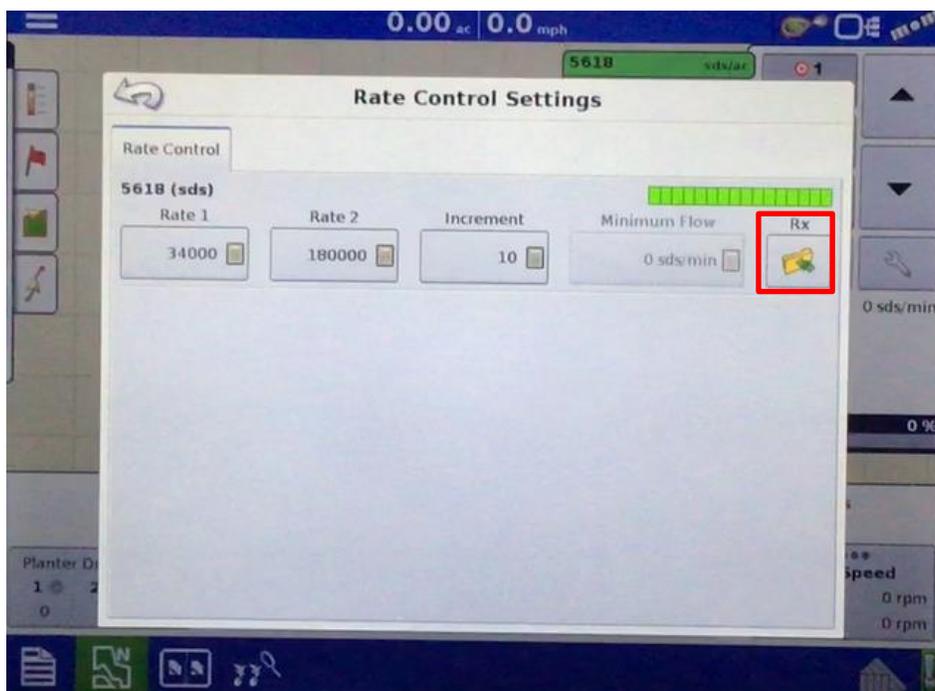


10. Import Prescription File Screen: Select the .shp Prescription File for the field you want to plant

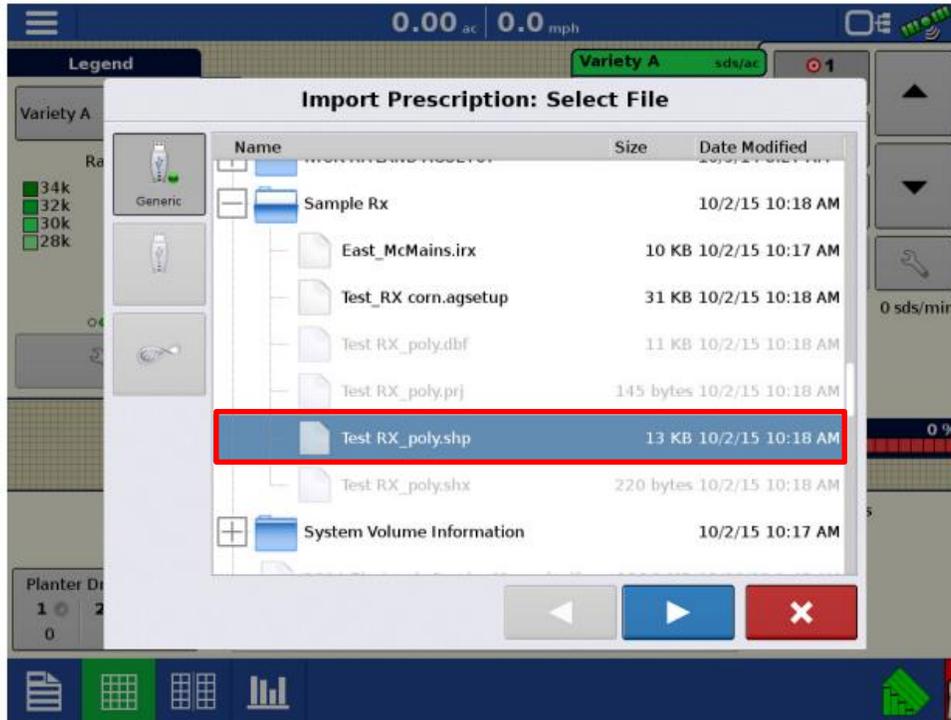


11. Import Prescription Screen: Select Green Check Box

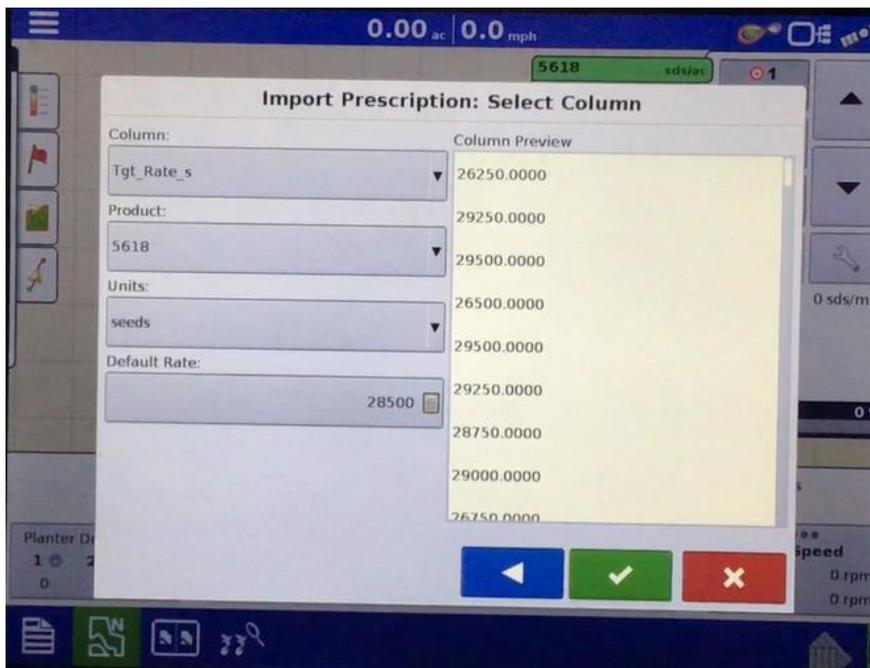


12. Rate Control Setting Screen: Select Back Arrow

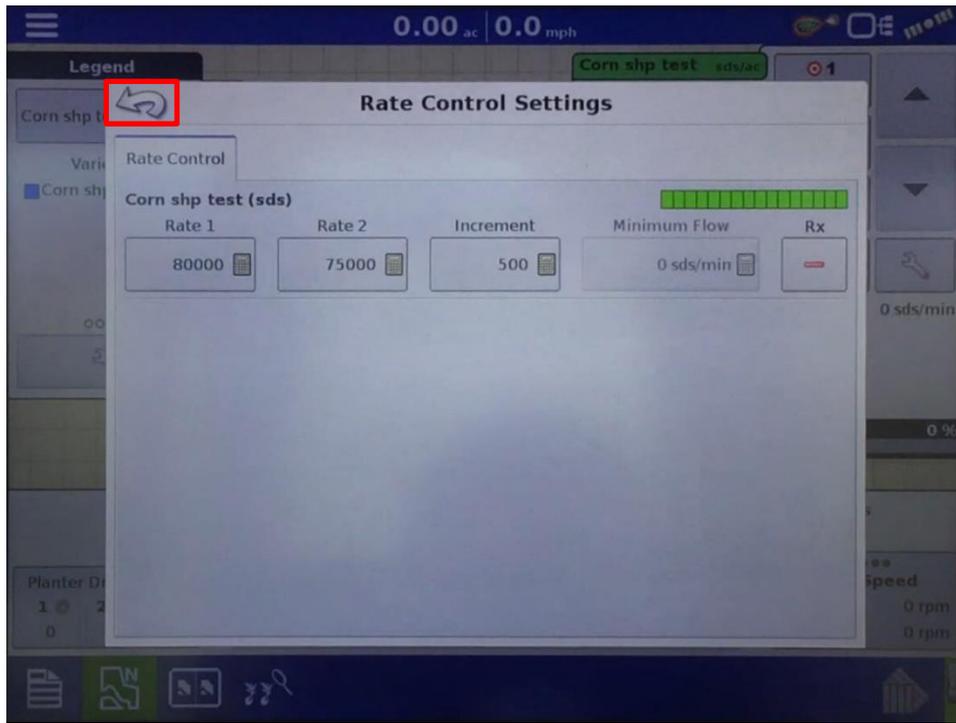

13. View Map Screen: VR Seeding Prescription is loaded to monitor

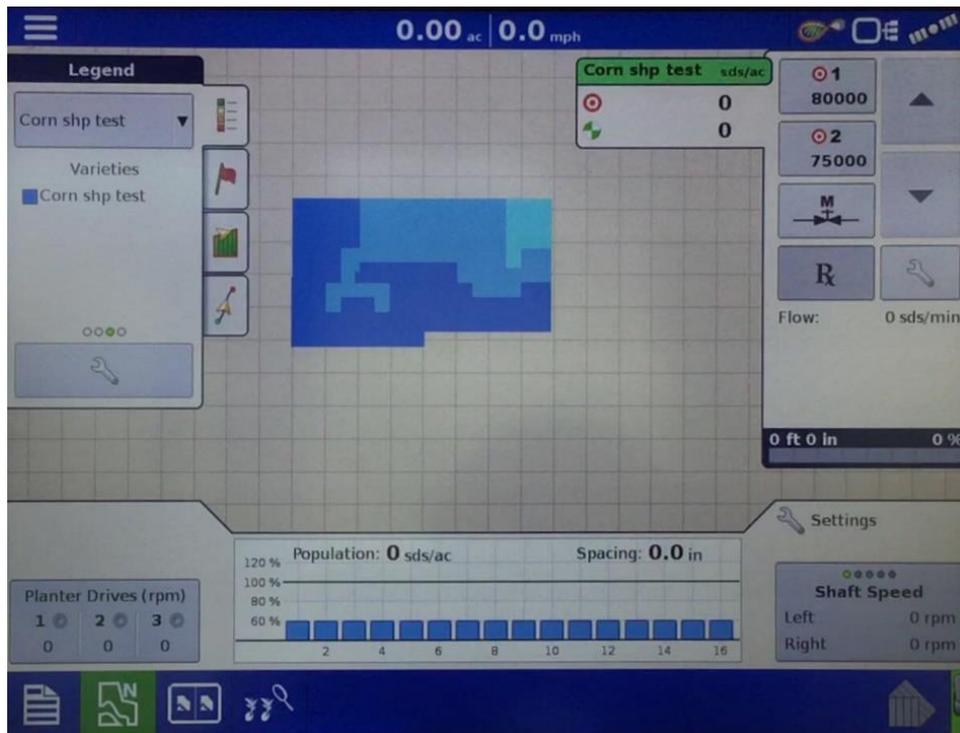

Note: If VR Prescription Map is Not on the Screen, Select Dropdown Menu and Select the Correct Product

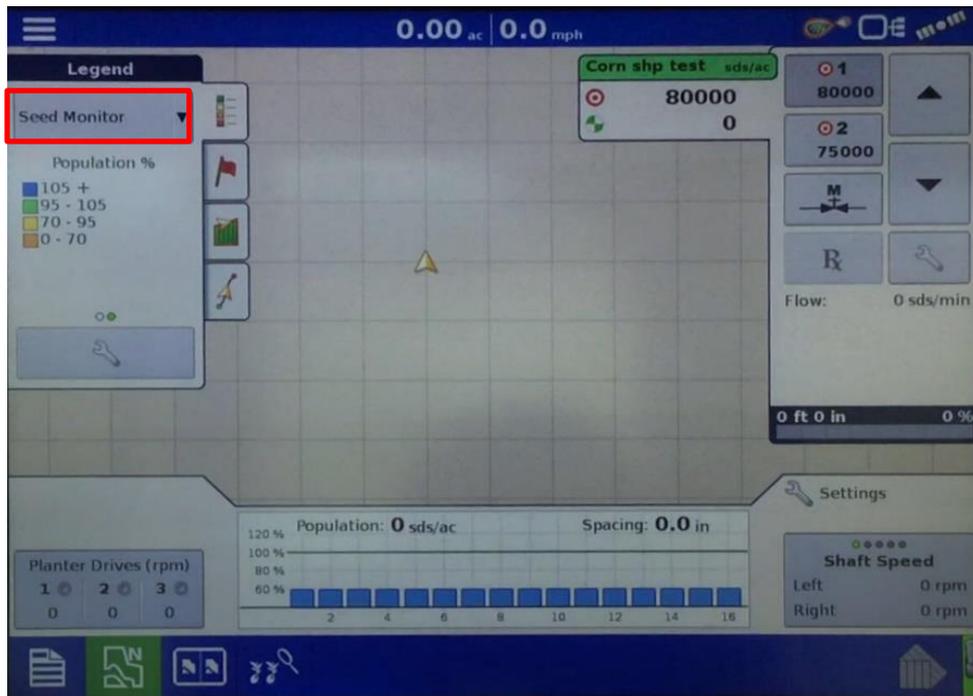

For additional help and support, contact us at:



1-855-278-9134



SUPPORT@ADVANTAGEACRE.COM

AgLeader Support Line: 515-735-7000