


Precision Planting 20/20 Seed Sense


1. Download your variable rate recommendation from your Advantage Acre® account, and place the zipped file into your flash drive.
2. To unzip the files, right click on the zipped folder. Select **Extract All**, then hit **Extract** to unzip the files.

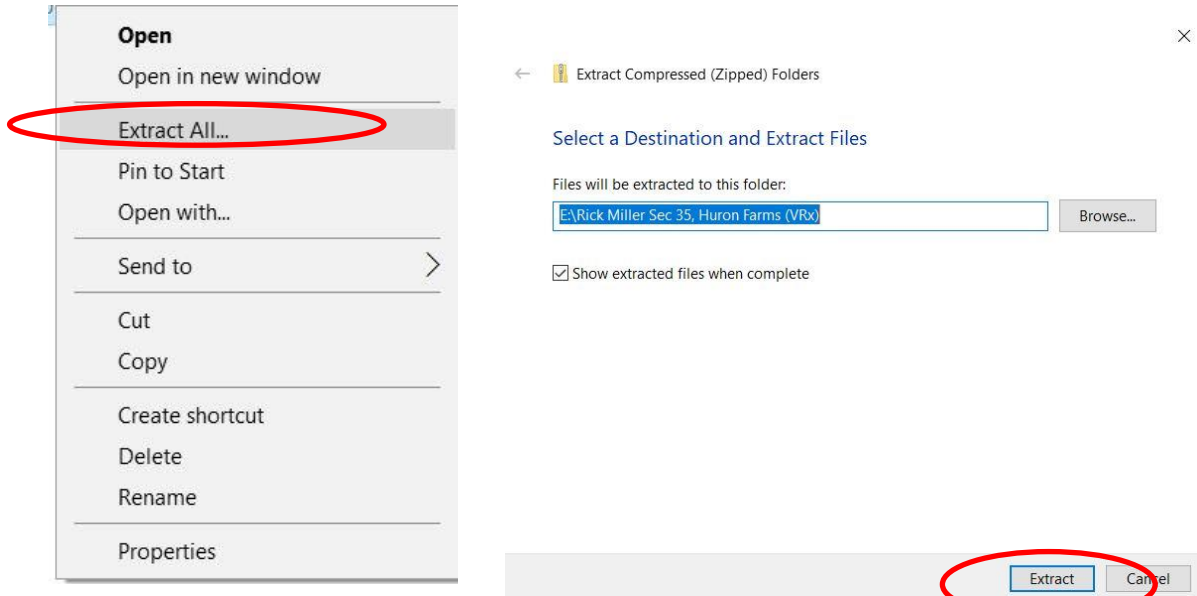

After unzipping the files, there will be three files unzipped on your flash drive.

	Rick Miller Sec 35, Huron Farms (VRx).dbf	10/16/2017 3:20 PM	DBF File	301 KB
	Rick Miller Sec 35, Huron Farms (VRx).shp	10/16/2017 3:20 PM	SHP File	125 KB
	Rick Miller Sec 35, Huron Farms (VRx).shx	10/16/2017 3:20 PM	SHX File	3 KB

3. Create a new folder in your flash drive named **Sendto2020**, this is very important so that the monitor knows where to pull the recommendation.

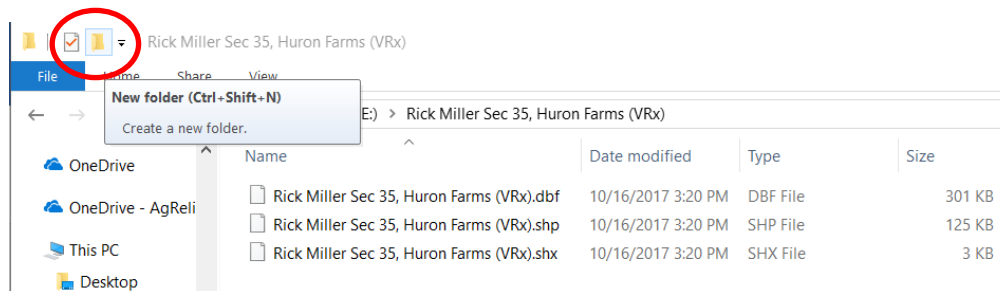


4. Move all three of the files into the folder named **Sendto2020**. The picture below is the view of the flash drive after the files have been moved.




5. Insert the flash drive into the back or side of the 20/20 monitor.




6. Turn on the 20/20 monitor. Once on the home page, select **Setup button** located on the lower right-hand corner of the monitor.

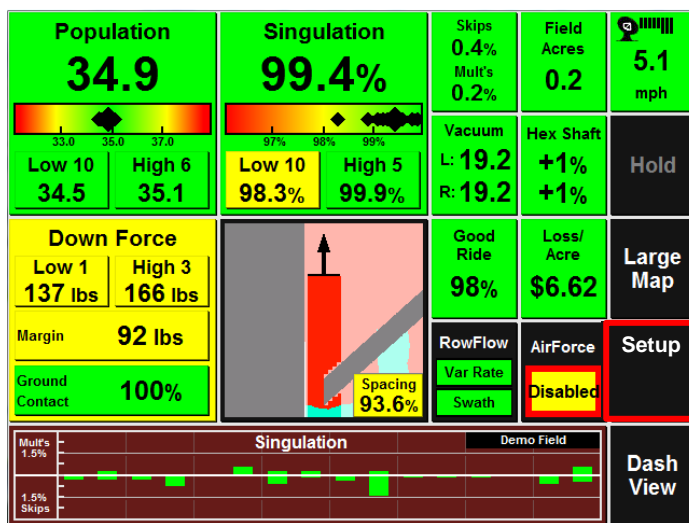


- On the Setup and Configuration Page, select the **Data tab** located in the upper right-hand corner of the screen.

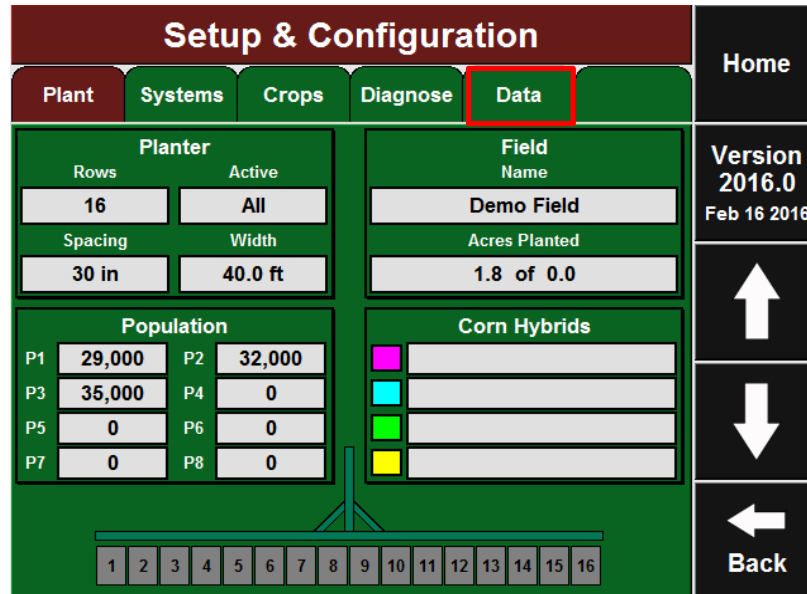


- Select the **import button** located directly below the data tab.

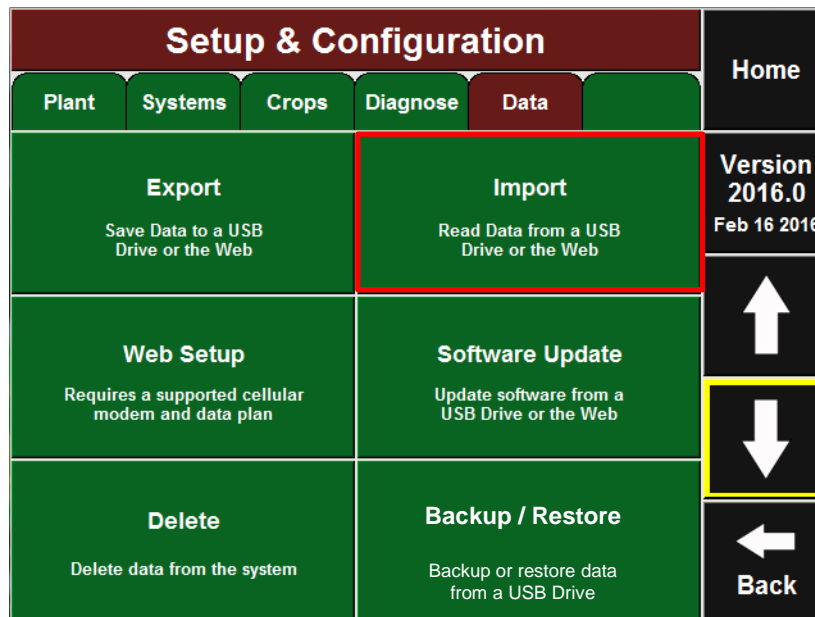


9. Select the **Prescription/Boundary** button

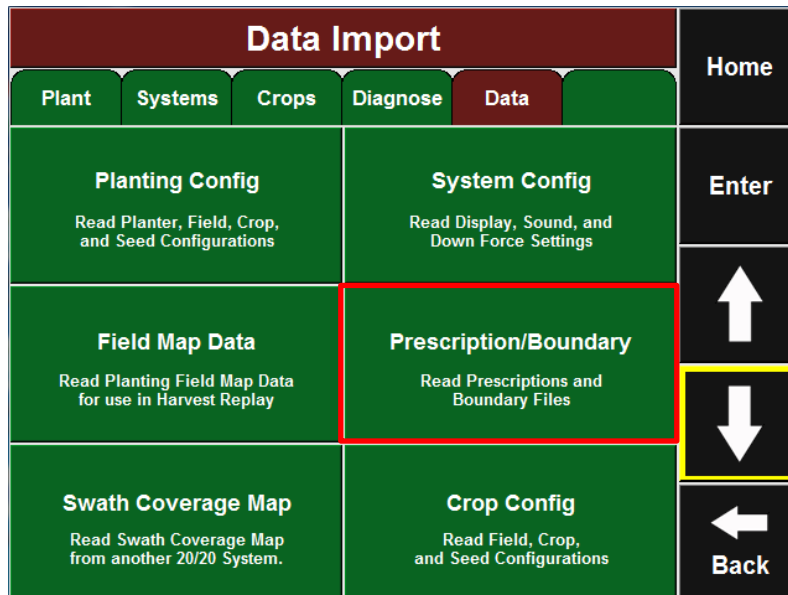

10. After selecting the Prescription/Boundary Button a window will pop up, listing how many shapefiles were successfully imported, select **OK**.

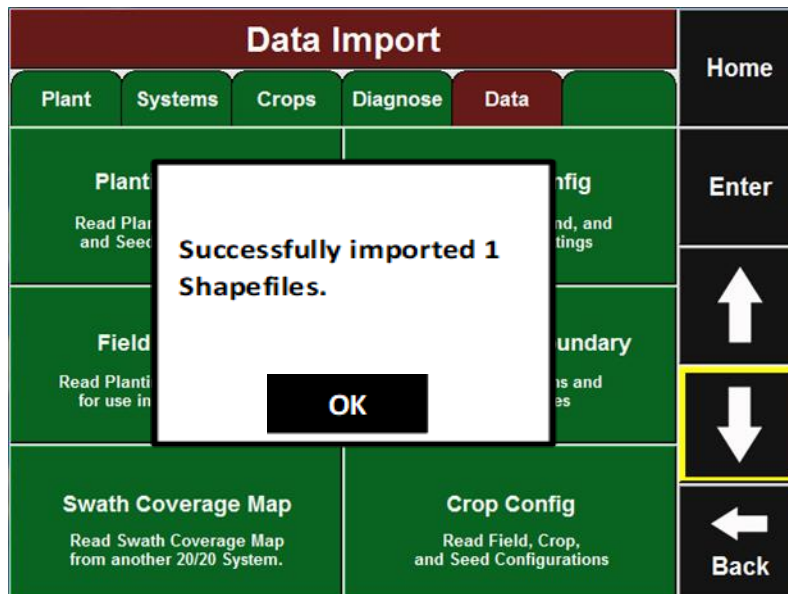


11. Select the **Plant** tab located in the upper left-hand corner of the screen. Next, select **Field Name** on the right side of the screen in the upper right corner.

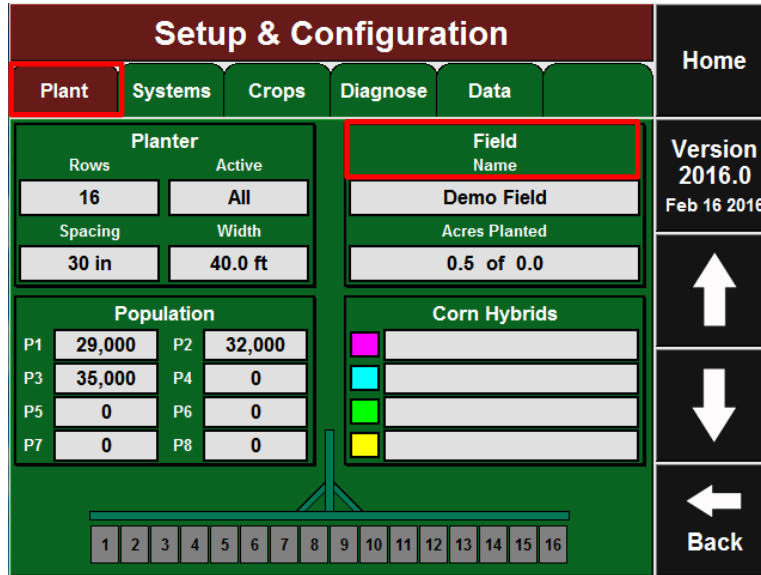


Setup & Configuration			
Plant	Systems	Crops	Diagnose
Planter Rows: 16 Spacing: 30 in Active: All Width: 40.0 ft		Field Name Demo Field Acres Planted: 0.5 of 0.0	Home Version 2016.0 Feb 16 2016 ↑ ↓ ← Back
Population P1: 29,000 P3: 35,000 P5: 0 P7: 0 P2: 32,000 P4: 0 P6: 0 P8: 0		Corn Hybrids [Color swatches and input fields]	
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16			

12. Click the **Field** that corresponds to the variable rate recommendation. If you do not see the field, you can create a new field by pressing **Create New** in the top right-hand corner of the screen.

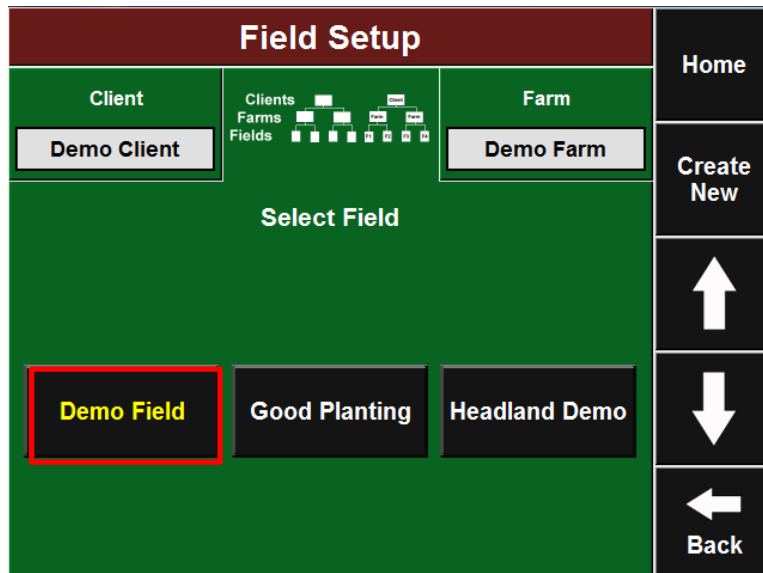


Field Setup		
Client Demo Client	Clients Farms Fields [Tree view]	Farm Demo Farm
Select Field Demo Field Good Planting Headland Demo		
Home Create New ↑ ↓ ← Back		

13. After selecting the field, select the **Prescription** button located on the middle right side of the screen.
14. After selecting the **Prescription** button, this is the page where all the prescriptions are loaded into a list. Scroll the list to find the correct file and select **Enter**. Be sure that **Standard Polygon Processing Mode** is selected at the bottom.

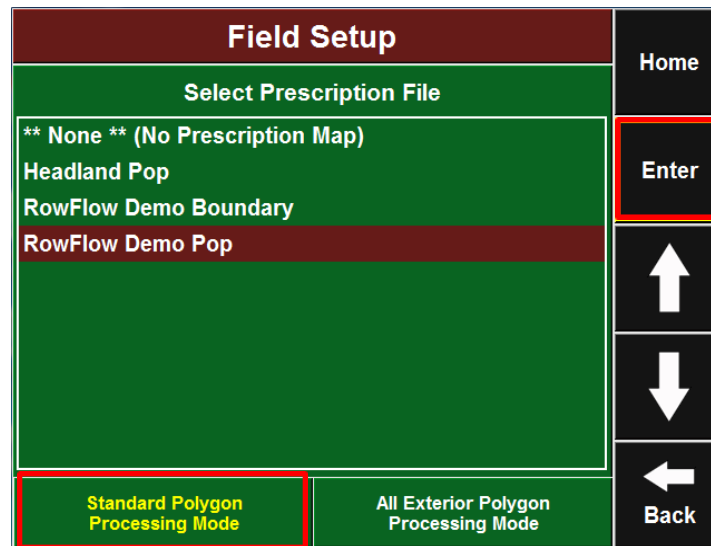

15. After selecting the prescription, you will need to select an attribute. The attribute page will appear after you have selected a prescription or you can go to the attribute button located on the right side of the field setup page.

- Once you are on the attribute page you will need to select **Tgt_Rate_s**. This is what the monitor uses for population. Select **Enter**.

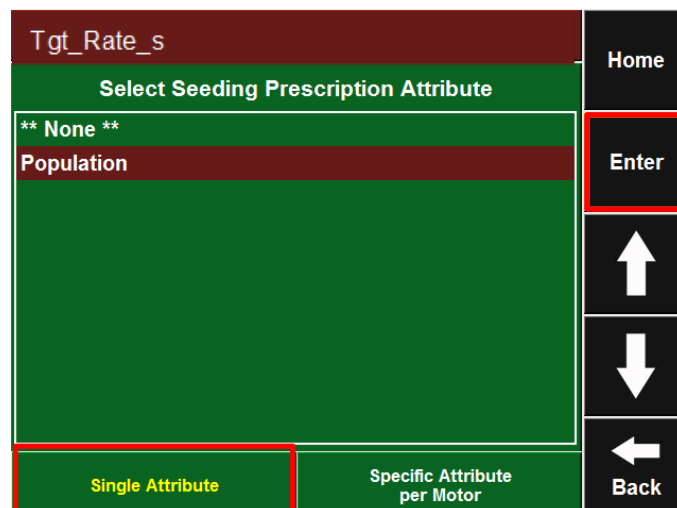

16. To ensure that the VR recommendation was loaded correctly, press **Home**, then select **Map**. At this point, the VR map will pop up.



You are now ready to plant with your Advantage Acre Rx!

<https://support.precisionplanting.com>

For additional help and support contact us at:

1-855-278-9134

support@advantageacre.com