


Precision Planting 20/20 Gen 3


1. Download your variable rate recommendation from your Advantage Acre® account, and place the zipped file into your flash drive.
2. To unzip the files, right click on the zipped folder. Select **Extract All**, then hit **Extract** to unzip the files.

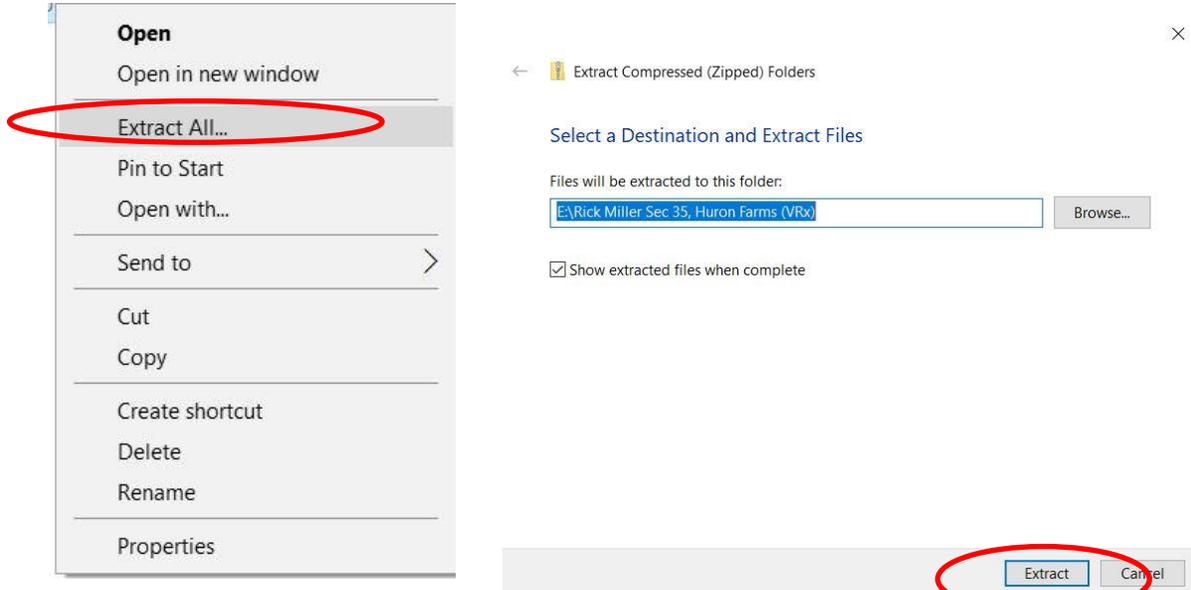

After unzipping the files, there will be three files unzipped on your flash drive.

	Rick Miller Sec 35, Huron Farms (VRx).dbf	10/16/2017 3:20 PM	DBF File	301 KB
	Rick Miller Sec 35, Huron Farms (VRx).shp	10/16/2017 3:20 PM	SHP File	125 KB
	Rick Miller Sec 35, Huron Farms (VRx).shx	10/16/2017 3:20 PM	SHX File	3 KB


3. Create a new folder in your flash drive named **Sendto2020**, this is very important so that the monitor knows where to pull the recommendation.

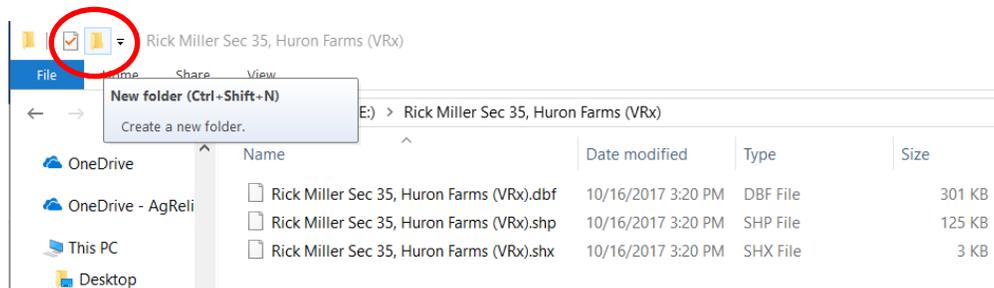


4. Move all three of the files into the folder named **Sendto2020**. The picture below is the view of the flash drive after the files have been moved.




5. Insert the flash drive into the back or side of the 20/20 monitor. Do not insert flash drive into the display base module (DBM).

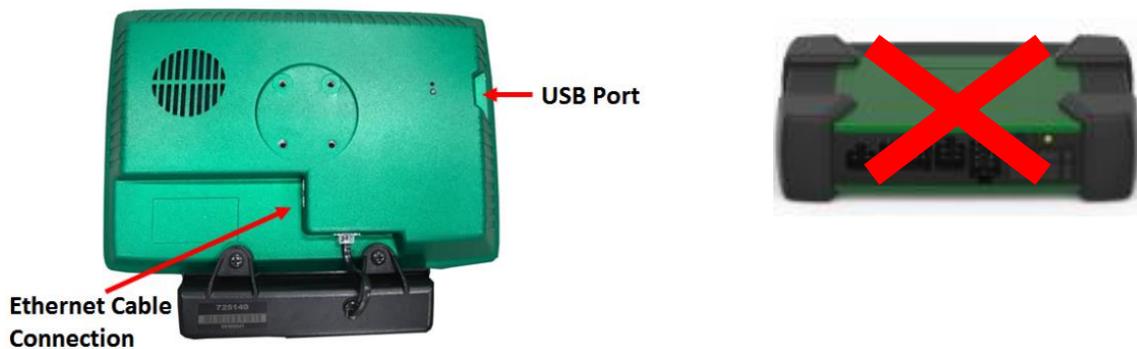


6. Turn on the 20/20 monitor. Once on the home page, select **Setup** button located on the lower right-hand corner of the monitor.

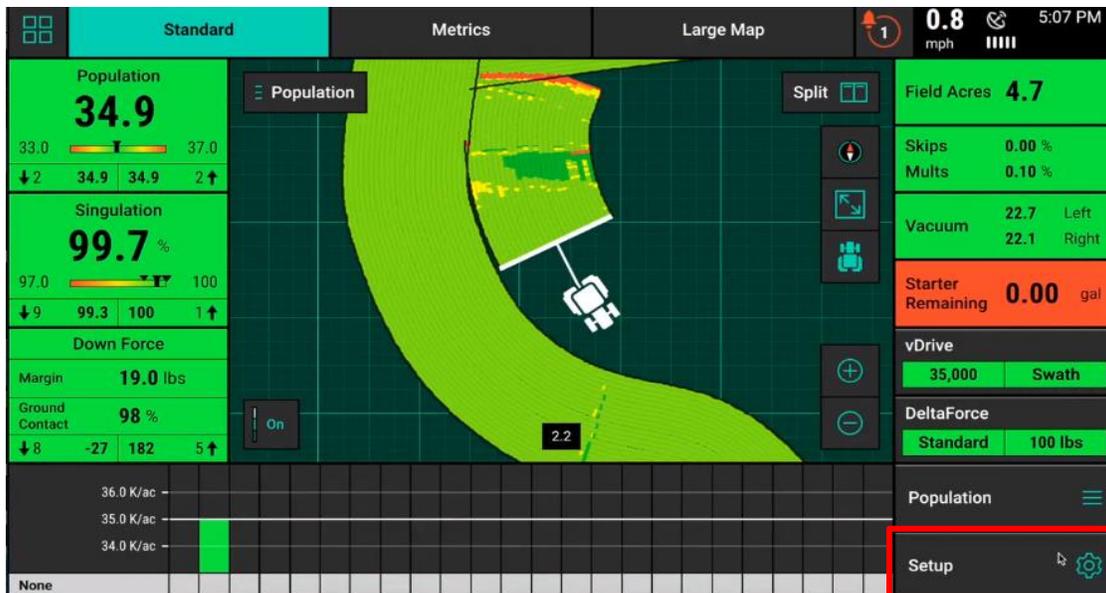


- On the Setup Page, select the **Data tab** located in the bottom right-hand corner of the screen.

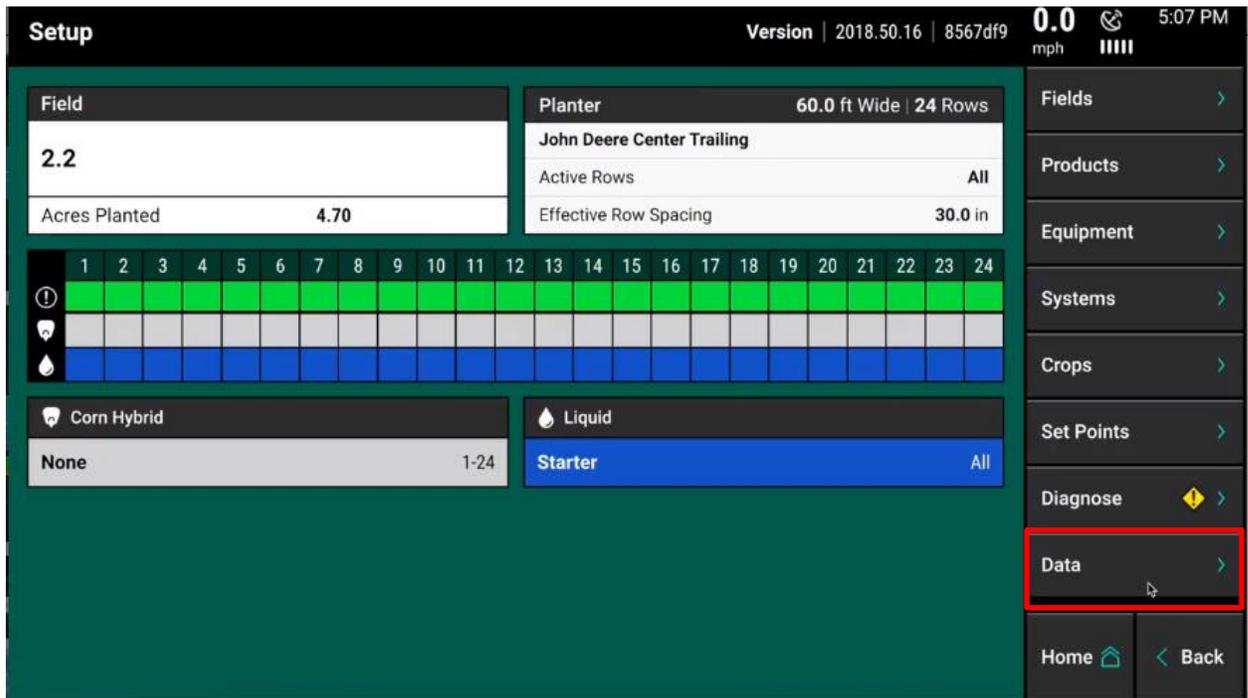


- Select the **import button** located at the right side of the screen.
- Select the **Prescription/Boundary button**. Once the prescriptions are imported select the home screen.

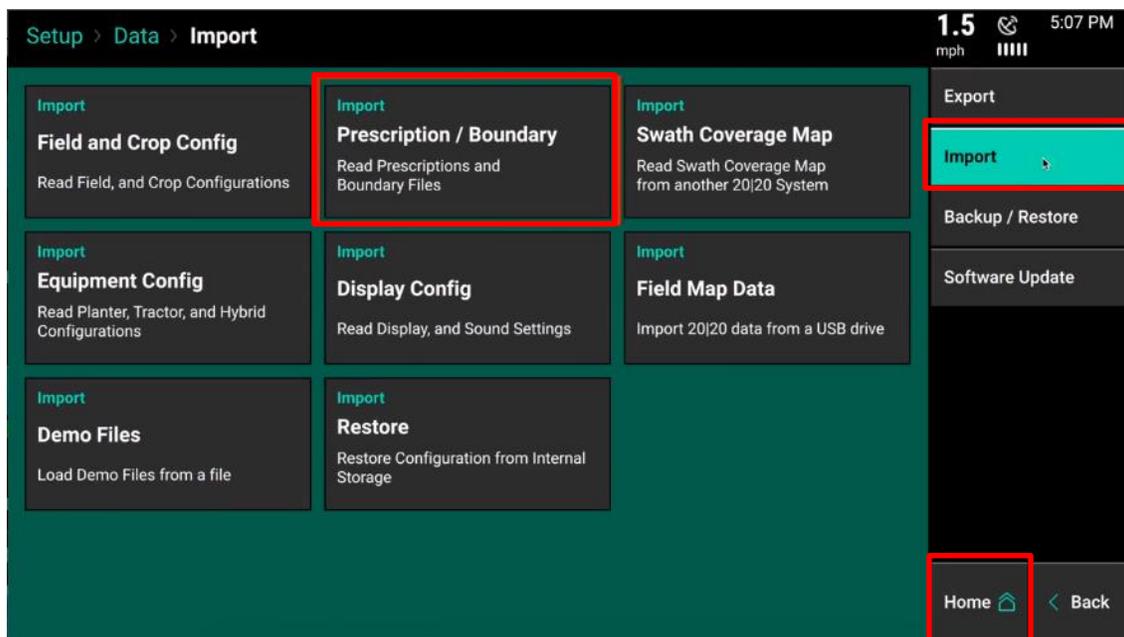

10. To assign the prescriptions click setup on the home screen and then select fields.

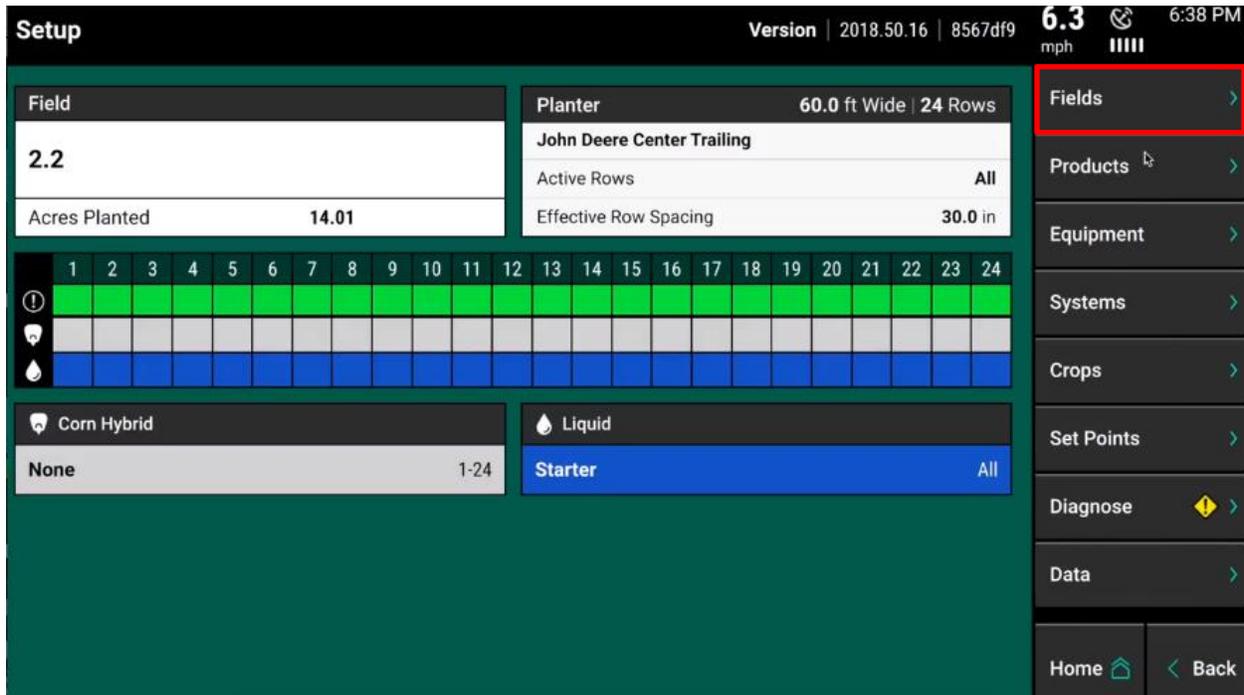

11. Once on the fields screen, select the field you would like to assign the prescription to.

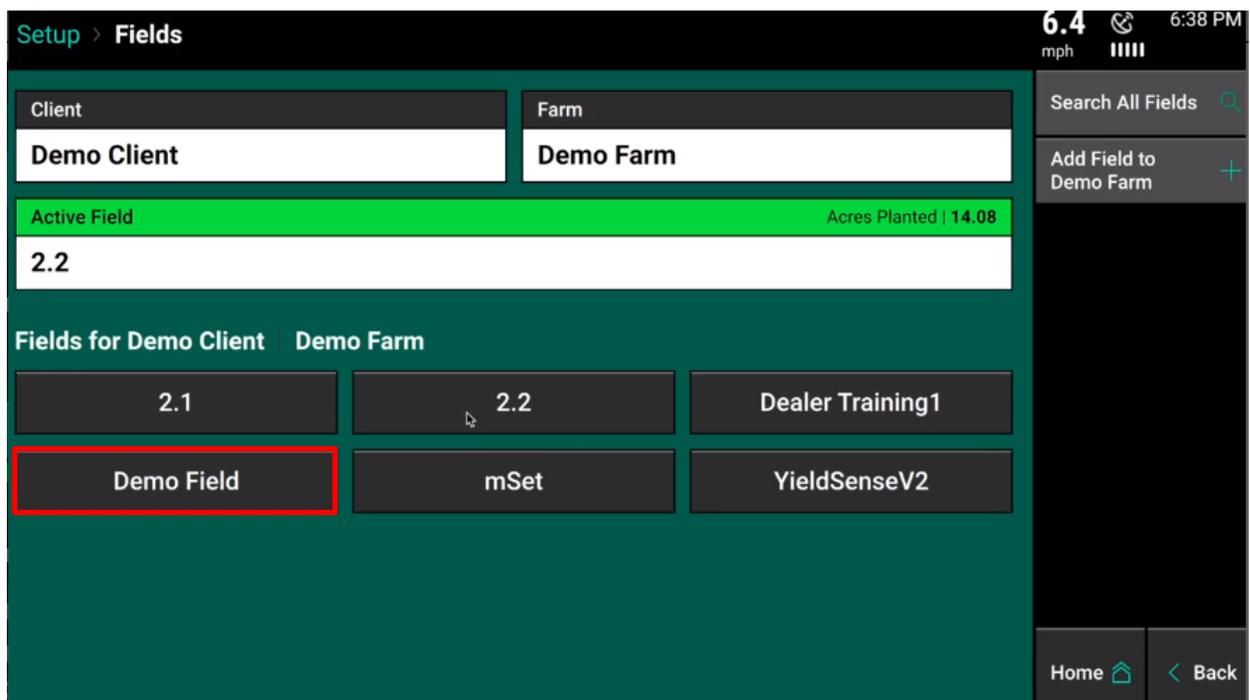

12. From the field setup page, select **Seeding Prescriptions**.

Setup > Fields > Field Setup

6.4 mph 6:38 PM

Field: Demo Field [Edit Name] [Make Active]

Client: Demo Client Farm: Demo Farm Boundary File: RowFlow Demo Boundary

vApplyHD Prescription: None Seeding Prescription: **None**

vApplyHD Attributes: Starter Seeding Attributes: 1

Tillage: Field Number: Field Acres: 0

Prescription Polygon Processing Mode: Standard Boundary Polygon Processing Mode: Standard

[Home] [Back]



13. After selecting seeding prescriptions, a pop-up window will appear where you will select the correct prescription file for that field. The name will include the farm, field name you entered into Advantage Acre.

Seeding Prescription [Cancel]


None	RowFlow Demo Boundary	RowFlow Demo Pop	Headland Pop
nw40	RandysHomeWe_21445DG_RandyBru_RandyHom	templeton	SchultesFarm_20823VT_RandyBru_Schultes
BB_N_of_Road_B00	Lee__Duval_B00	Gamble_B00	Hermann_B00
Berger_Home_B00	DiGerolamo_B00	Lee__Stubs_Vernon_B00	Lee__Buford_B00
BB_Simon_B00	scenario2R	12107_B00	12107 population 2013_719 rev
Sand Track Rx_poly	C4CORN	Training_Rx_06	Training_Rx_08
Training_Rx_05	Training_Rx_07		

14. After selecting the prescription, you will need to select an attribute. The attribute page will appear after you have selected a prescription, or you can go to the attribute button located on the field setup page.

- Once you are on the attribute page you will need to select **Tgt_Rate_s**. This is what the monitor uses for population.
- If loading a **multi-hybrid recommendation**, assign an attribute to both the blue, and the orange tank, shown in the second picture.

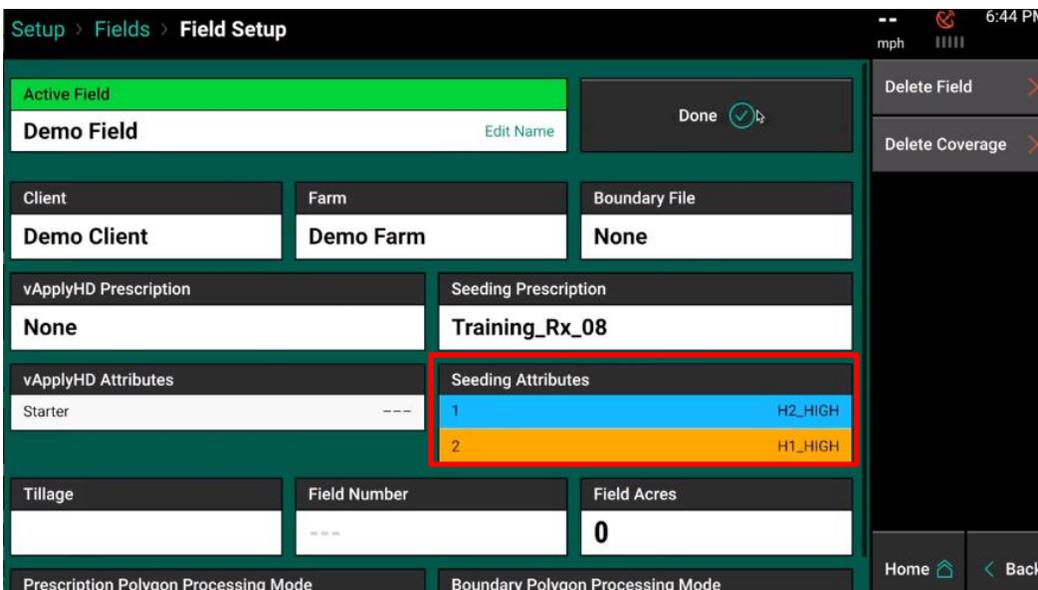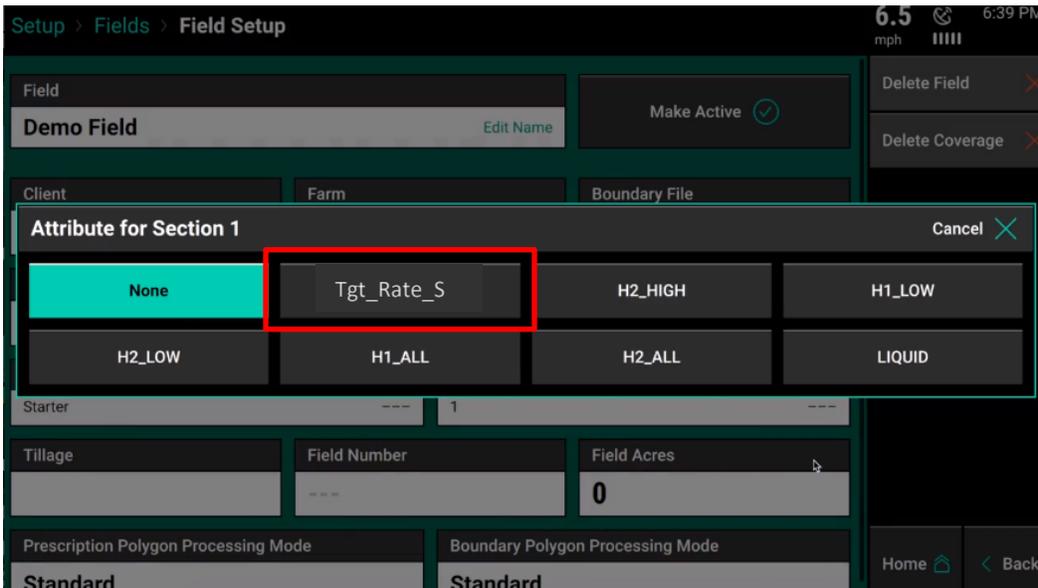

15. Once you have your seeding prescription file and your seeding attribute selected correctly, be sure to select **Make Active** and you are ready to plant.

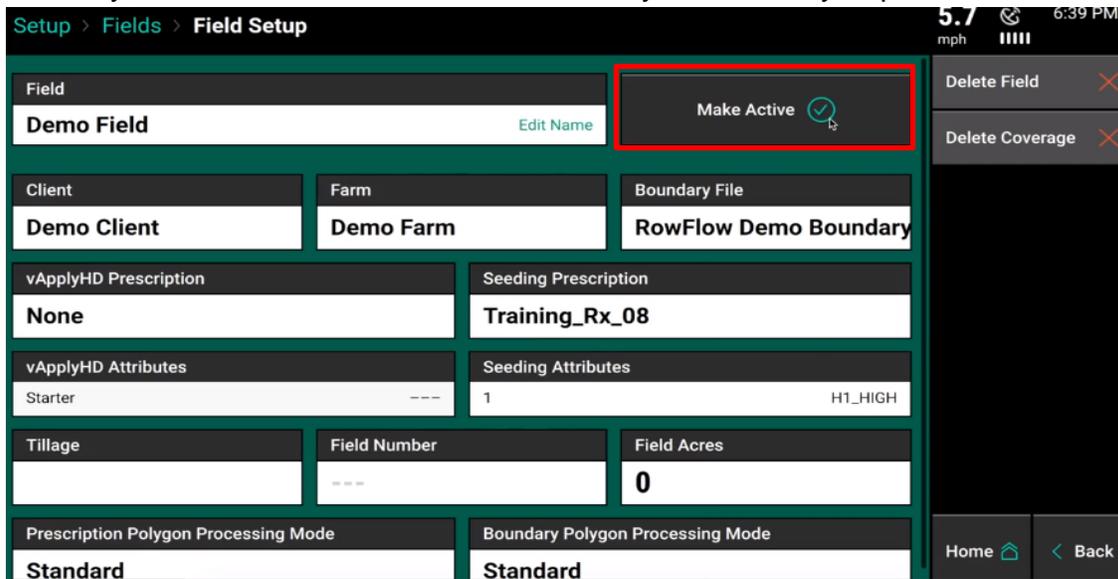

Setup > Fields > Field Setup		
Field		Make Active <input checked="" type="checkbox"/>
Demo Field		Edit Name
Client	Farm	Boundary File
Demo Client	Demo Farm	RowFlow Demo Boundary
vApplyHD Prescription		Seeding Prescription
None		Training_Rx_08
vApplyHD Attributes		Seeding Attributes
Starter ---		1 HT_HIGH
Tillage	Field Number	Field Acres
	---	0
Prescription Polygon Processing Mode		Boundary Polygon Processing Mode
Standard		Standard

You are now ready to plant with your Advantage Acre Rx!

Precision Planting Support Email: <https://support.precisionplanting.com>

For additional help and support contact us at:

1-855-278-9134

support@advantageacre.com